

USER PREFERENCES

SET FAVOURITE POSITION – MAX 4 POSITIONS

Move to Position

REMOTE *back* – PRESS [SET] *motor jolt x 1*

REMOTE *back* – PRESS [SET] *motor jolt x 1*

Motor will automatically stop at favourite position when passing

EDIT FAVOURITE POSITION

Move to Position to Edit

REMOTE *back* – PRESS [SET] *motor jolt x 1*

Adjust Height

REMOTE *back* – PRESS [SET] *motor jolt x 1*

DELETE FAVOURITE POSITION

Move to position to delete

REMOTE *back* – HOLD [SET] *motor jolt x 2*

If Upper or Lower Limit have been deleted, blind to use closest favourite position as Upper or Lower Limit

COPY CHANNEL USING REMOTE – ADD CHANNEL OR REMOTE

EXISTING CHANNEL – HOLD [STOP] *motor jolt x 1*

NEW CHANNEL – PRESS [UP] *motor jolt x 1*

DELETE CHANNEL ON REMOTE – DELETE CHANNEL OR REMOTE

CONNECTED CHANNEL – HOLD [STOP] *motor jolt x 1*

CHANNEL TO DELETE *back* – PRESS [SET] *motor jolt x 1*



OneTouch - BATTERY DC ROLLER BLINDS MOTOR SETUP INSTRUCTIONS



LOUVOLITE (One Touch)

Motor: One Touch R1918 – Battery DC Motor

Remote: One Touch | 1CH R1920 | 16CH R1924

REMOTE – Insert Battery

MOTOR – Fully Charge

FACTORY RESET MOTOR

MOTOR – PRESS & HOLD [BUTTON]

PRESS 4 times, HOLD on 5th time until motor jolts *beep x5 & jolt x2*

MOTOR POWER ON

MOTOR – HOLD [BUTTON]

motor beep x1

MOTOR POWER OFF

MOTOR – HOLD [BUTTON]

beep & jolt & extended beep

PAIRING

Select Channel

MOTOR – HOLD [BUTTON]

beep & jolt

REMOTE – PRESS [UP]

motor jolt x 1

REVERSE ROLL DIRECTION *if required*

REMOTE – HOLD [STOP]

motor jolt x 1

REMOTE – PRESS [DOWN]

motor jolt x 1

SET LIMITS

UP Limit FIRST

REMOTE back – PRESS [SET]

motor jolt x 1

REMOTE – HOLD [UP]

continuous travel

REMOTE – PRESS [UP]

step mode

REMOTE back – PRESS [SET]

motor jolt x 1

DOWN Limit SECOND

REMOTE – HOLD [DOWN]

continuous travel

REMOTE – PRESS [DOWN]

step mode

REMOTE back – PRESS [SET]

motor jolt x 1

REMOTE back – PRESS [SET]

motor jolt x 1

ADJUST UPPER LIMIT

Move to Upper Limit

REMOTE back – PRESS [SET]

motor jolt x 1

Adjust Height

REMOTE back – PRESS [SET]

motor jolt x 1

ADJUST LOWER LIMIT

Move to Lower Limit

REMOTE back – PRESS [SET]

motor jolt x 1

Adjust Height

REMOTE back – PRESS [SET]

motor jolt x 1

COPY CHANNEL USING MOTOR – ADD CHANNEL OR REMOTE

Select Channel

-

MOTOR – HOLD [BUTTON]

beep & jolt

NEW CHANNEL – PRESS [UP]

motor jolt x 1

DELETE CHANNEL ON MOTOR – DELETE CHANNEL OR REMOTE

MOTOR – HOLD [BUTTON]

beep & jolt

CHANNEL TO DELETE back – PRESS [SET]

motor jolt x 1

HIDE CHANNEL

Select last channel to keep

REMOTE – HOLD [STOP] [RIGHT]

display flash CC

UNHIDE CHANNEL

REMOTE – HOLD [STOP] [RIGHT]

display flash CC

FACTORY RESET MOTOR USING REMOTE

REMOTE – HOLD [STOP]

motor jolt x 1

REMOTE back – HOLD [SET]

motor jolt x 3