

**USER PREFERENCES**

**SET FAVOURITE POSITION**

<i>Move to Position</i>	
REMOTE <i>back</i> – PRESS [P2]	<i>jolt &amp; beep</i>
REMOTE – PRESS [STOP]	<i>jolt &amp; beep</i>
REMOTE – PRESS [STOP]	<i>jolt x 2beep x3</i>

**MOVE TO FAVOURITE POSITION**

REMOTE – HOLD [STOP]
----------------------

**DELETE FAVOURITE POSITION**

REMOTE <i>back</i> – PRESS [P2]	<i>jolt &amp; beep</i>
REMOTE – PRESS [STOP]	<i>jolt &amp; beep</i>
REMOTE – PRESS [STOP]	<i>jolt &amp; beep</i>

**COPY CHANNEL USING REMOTE – ADD CHANNEL OR REMOTE**

EXISTING CHANNEL <i>back</i> – PRESS [P2]	<i>jolt &amp; beep</i>
EXISTING CHANNEL <i>back</i> – PRESS [P2]	<i>jolt &amp; beep</i>
NEW CHANNEL <i>back</i> – PRESS [P2]	<i>jolt x2 beep x3</i>

**DELETE CHANNEL USING REMOTE – DELETE CHANNEL OR REMOTE**

CHANNEL TO KEEP <i>back</i> – PRESS [P2]	<i>jolt &amp; beep</i>
CHANNEL TO KEEP <i>back</i> – PRESS [P2]	<i>jolt &amp; beep</i>
CHANNEL TO DELETE <i>back</i> – PRESS [P2]	<i>jolt x2 beep x3</i>



# SABER EL/EQ - WIRED AC ROLLER BLINDS MOTOR SETUP INSTRUCTIONS

Speedy Blinds  
1300 88 44 24  
support@speedyblinds.com.au  
www.speedyblinds.com.au  
33 Latitude Blvd, Thomastown VIC 3074



**TBS (Saber) Roller Blinds**

Motor: SABER TBS35EL/S – Wired AC Motor  
 SABER H0-TBS35EQ/S – Wired AC Motor  
*Q stands for Quiet*

Remote: 15CH – TBS 1802/S

REMOTE – **Insert Battery**  
 MOTOR – **Connect Power**

**FACTORY RESET MOTOR**

MOTOR – HOLD [BUTTON] *jolt x4 & let go of button & beep x4*

**PAIRING**

*Select Channel*

MOTOR – PLUG IN – or – MOTOR – HOLD [BUTTON] *jolt & beep*  
*jolt & beep*

REMOTE – HOLD [STOP] *jolt x2 beep x3*

**REVERSE ROLL DIRECTION** *if required*

REMOTE – HOLD [UP] [DOWN] *motor jolt x1*

**SET LIMITS**

**UP Limit FIRST**

REMOTE – HOLD [UP] *continuous travel*

REMOTE – PRESS [UP] *step mode*

REMOTE – HOLD [UP] [STOP] *jolt x2 beep x3*

**DOWN Limit SECOND**

REMOTE – HOLD [DOWN] *continuous travel*

REMOTE – PRESS [DOWN] *step mode*

REMOTE – HOLD [DOWN] [STOP] *jolt x2 beep x3*

**ADJUST UPPER LIMIT**

REMOTE – HOLD [UP] [STOP] *jolt & beep*

*Adjust Height*

REMOTE – HOLD [UP] [STOP] *jolt x2 beep x3*

**ADJUST LOWER LIMIT**

REMOTE – HOLD [DOWN] [STOP] *jolt & beep*

*Adjust Height*

REMOTE – HOLD [DOWN] [STOP] *jolt x2 beep x3*

**COPY CHANNEL USING MOTOR – ADD CHANNEL OR REMOTE**

*Select Channel*

MOTOR – HOLD [BUTTON] *jolt & beep*

REMOTE – HOLD [STOP] *jolt x2 beep x3*

**DELETE ALL REMOTES CONNECTED TO MOTOR USING REMOTE**

REMOTE *back* – PRESS [P2] *jolt & beep*

REMOTE – PRESS [STOP] *jolt & beep*

REMOTE *back* – PRESS [P2] *jolt x2 beep x3*

**DELETE ALL LIMITS ON MOTOR USING REMOTE**

REMOTE *back* – PRESS [P2] *jolt & beep*

REMOTE – PRESS [DOWN] *jolt & beep*

REMOTE *back* – PRESS [P2] *jolt x2 beep x3*

**HIDE / UNHIDE CHANNELS**

REMOTE – HOLD [LEFT] [RIGHT] *display 15*

*Select last channel to keep*

REMOTE – PRESS [STOP] *display oK*

**LOCK / UNLOCK LIMIT ON REMOTE**

REMOTE – HOLD [STOP] 15secs *display L or U*

REMOTE *back* – PRESS [P2] *display oK*

U – Limit Settings Unlocked  
 L – Limit Settings Locked

**ENABLE SLEEP MODE**

MOTOR – HOLD [BUTTON] *jolt x2 & beep x2*

**WAKE UP**

MOTOR – PRESS [BUTTON] *roll to nearest limit*

**SWITCH BETWEEN TILT & ROLL MODE**

REMOTE – HOLD [UP] [DOWN] *motor jolt x1*

REMOTE – PRESS [STOP] *switch modes*

MODE: TILT (hold Up or Down to ROLL) *jolt & beep*

MODE: ROLL *jolt x 2 beep x 3*

**ONE WAY (UNIDIRECTIONAL) / TWO WAY (BIDIRECTIONAL) MODE**

REMOTE – Remove Battery

REMOTE – HOLD [P2]

REMOTE – Put in Battery

1 – One Way (Unidirectional) Mode (*will not work*)

2 – Two Way (Bidirectional) Mode (*default*)

**TROUBLESHOOT**

**MOTOR** check got power

MOTOR not in sleep mode

MOTOR in roll mode

**REMOTE** check got battery

REMOTE unlocked

REMOTE unhide all channels

REMOTE in Two Way BIDIRECTIONAL Mode

All else fail, Factory Reset