

## USER PREFERENCES

### SET FAVOURITE POSITION

*Move to Position*

REMOTE *back* – PRESS [P2]

*jolt & beep*

REMOTE – PRESS [STOP]

*jolt & beep*

REMOTE – PRESS [STOP]

*jolt x2 beep x3*

### MOVE TO FAVOURITE POSITION

REMOTE – HOLD [STOP]

### DELETE FAVOURITE POSITION

REMOTE *back* – PRESS [P2]

*jolt & beep*

REMOTE – PRESS [STOP]

*jolt & beep*

REMOTE – PRESS [STOP]

*jolt & beep*

### COPY CHANNEL USING REMOTE – ADD CHANNEL OR REMOTE

EXISTING CHANNEL *back* – PRESS [P2]

*jolt & beep*

EXISTING CHANNEL *back* – PRESS [P2]

*jolt & beep*

NEW CHANNEL *back* – PRESS [P2]

*jolt x2 beep x3*

### DELETE CHANNEL USING REMOTE – DELETE CHANNEL OR REMOTE

CHANNEL TO KEEP *back* – PRESS [P2]

*jolt & beep*

CHANNEL TO KEEP *back* – PRESS [P2]

*jolt & beep*

CHANNEL TO DELETE *back* – PRESS [P2]

*jolt x2 beep x3*

### INCREASE SPEED – 3 Speeds Available *low/med/high*

REMOTE *back* – PRESS [P2]

*jolt & beep*

REMOTE – PRESS [UP]

*jolt & beep*

REMOTE – PRESS [UP]

*jolt x2 beep x1*

### DECREASE SPEED – 3 Speeds Available *low/med/high*

REMOTE *back* – PRESS [P2]

*jolt & beep*

REMOTE – PRESS [DOWN]

*jolt & beep*

REMOTE – PRESS [DOWN]

*jolt x2 beep x1*

### SOFT STOP OFF – *motor must be on low speed setting*

REMOTE *back* – PRESS [P2]

*jolt & beep*

REMOTE – PRESS [DOWN]

*jolt & beep*

REMOTE – PRESS [DOWN]

*jolt & beep*

### SOFT STOP ON – *motor must be on high speed setting*

REMOTE *back* – PRESS [P2]

*jolt & beep*

REMOTE – PRESS [UP]

*jolt & beep*

REMOTE – PRESS [UP]

*jolt & extended beep*

### BATTERY CHECK – *motor must at upper limit*

REMOTE – HOLD [UP]

*% of fabric is % of charge remaining*

### CHARGING LED ON/OFF – *motor must at lower limit*

REMOTE – HOLD [DOWN]

*motor light flash x3 - toggle ON/OFF*

**SPEEDY  
BLINDS**

**SPEEDY  
BLINDS**



**ROLLEASE  
ACMEDA**

PRECISION IN MOTION

## ZERO ARC - BATTERY DC ROLLER BLINDS MOTOR SETUP INSTRUCTIONS



Speedy Blinds  
1300 88 44 24  
support@speedyblinds.com.au  
www.speedyblinds.com.au  
33 Latitude Blvd, Thomastown VIC 3074

**ACMEDA (Automate) Roller Blinds**

Motor: Zero ARC Wirefree Li-ion 5V 1.1Nm Short | 1.1Nm | 2.0Nm – Battery DC Motor  
 Discontinued ARC Li-ion 12V 1.1Nm | Q2.0Nm (Quiet) | 3.0Nm | 10Nm – Battery DC Motor  
 Remote: Automate | 15CH ARC Remote

REMOTE – Insert Battery  
 MOTOR – Fully Charge (5V Micro USB)

**FACTORY RESET**

MOTOR – HOLD [BUTTON] *jolt x4 & beep x4*

**PAIRING**

*Select Channel*

MOTOR – HOLD [BUTTON] *jolt & beep*

REMOTE – HOLD [STOP] *jolt x2 & beep x3*

**REVERSE ROLL DIRECTION** *if required*

REMOTE – HOLD [UP] [DOWN] *motor jolt x 1*

**SET LIMITS**

**UP Limit FIRST**

REMOTE – HOLD [UP] *continuous travel*

REMOTE – PRESS [UP] *step mode*

REMOTE – HOLD [UP] [STOP] *jolt x2 beep x3*

**DOWN Limit SECOND**

REMOTE – HOLD [DOWN] *continuous travel*

REMOTE – PRESS [DOWN] *step mode*

REMOTE – HOLD [DOWN] [STOP] *jolt x2 beep x3*

**ADJUST UPPER LIMIT**

REMOTE – HOLD [UP] [STOP] *jolt & extended beep*

*Adjust Height*

REMOTE – HOLD [UP] [STOP] *jolt x2 beep x3*

**ADJUST LOWER LIMIT**

REMOTE – HOLD [DOWN] [STOP] *jolt & extended beep*

*Adjust Height*

REMOTE – HOLD [DOWN] [STOP] *jolt x2 beep x3*

**COPY CHANNEL USING MOTOR – ADD CHANNEL OR REMOTE**

*Select Channel*

MOTOR – HOLD [BUTTON] *jolt & beep*

NEW CHANNEL – HOLD [STOP] *jolt x2 beep x3*

**DELETE CHANNEL USING MOTOR – DELETE CHANNEL OR REMOTE**

*Select Channel*

MOTOR – HOLD [BUTTON] *jolt & beep*

CHANNEL TO DELETE – HOLD [STOP] *jolt x2 beep x3*

**HIDE / UNHIDE CHANNELS**

REMOTE – HOLD [+ ] [-] *display 15*

*Select last channel to keep*

REMOTE – PRESS [STOP] *display oK*

**LOCK / UNLOCK LIMIT SETTING ON REMOTE**

REMOTE *back* – HOLD [TOP RIGHT] *display L or U*

U – Limit Settings Unlocked

L – Limit Settings Locked

**ENABLE SLEEP MODE**

MOTOR – HOLD [BUTTON] *jolt x2 beep x2*

**WAKE UP**

MOTOR – PRESS [BUTTON] *roll to nearest limit*

**SWITCH BETWEEN TILT & ROLL MODE**

REMOTE – HOLD [UP] [DOWN] *motor jolt x1*

REMOTE – PRESS [STOP] *switch modes*

MODE: TILT (hold Up or Down to Roll) *jolt & beep*

MODE: ROLL *jolt x2 beep x3*

**TWO WAY (BIDIRECTIONAL) / ONE WAY (UNIDIRECTIONAL) MODE**

REMOTE – Remove Battery

REMOTE – HOLD [P2]

REMOTE – Put in Battery

1 – Two Way (Bidirectional) Mode (ARC Motors Only)

2 – One Way (Unidirectional) Mode (EL Motors Only)

**TROUBLESHOOT**

**MOTOR** check got power

MOTOR not in sleep mode

MOTOR in roll mode

**REMOTE** check got battery

REMOTE unlocked

REMOTE unhide all channels

REMOTE in Two Way BIDIRECTIONAL Mode

All else fail, Factory Reset