

**USER PREFERENCES**

**SET FAVOURITE POSITION**

<i>Move to Position</i>	
REMOTE <i>back</i> – PRESS [P2]	<i>jolt &amp; beep</i>
REMOTE – PRESS [STOP]	<i>jolt &amp; beep</i>
REMOTE – PRESS [STOP]	<i>jolt x2 beep x3</i>

**MOVE TO FAVOURITE POSITION**

REMOTE – HOLD [STOP]	
----------------------	--

**DELETE FAVOURITE POSITION**

REMOTE <i>back</i> – PRESS [P2]	<i>jolt &amp; beep</i>
REMOTE – PRESS [STOP]	<i>jolt &amp; beep</i>
REMOTE – PRESS [STOP]	<i>jolt &amp; beep</i>

**COPY CHANNEL USING REMOTE – ADD CHANNEL OR REMOTE**

EXISTING CHANNEL <i>back</i> – PRESS [P2]	<i>jolt &amp; beep</i>
EXISTING CHANNEL <i>back</i> – PRESS [P2]	<i>jolt &amp; beep</i>
NEW CHANNEL <i>back</i> – PRESS [P2]	<i>jolt x2 beep x3</i>

**DELETE CHANNEL USING REMOTE – DELETE CHANNEL OR REMOTE**

CHANNEL TO KEEP <i>back</i> – PRESS [P2]	<i>jolt &amp; beep</i>
CHANNEL TO KEEP <i>back</i> – PRESS [P2]	<i>jolt &amp; beep</i>
CHANNEL TO DELETE <i>back</i> – PRESS [P2]	<i>jolt x2 beep x3</i>

**INCREASE SPEED – 3 Speeds Available *low/med/high***

REMOTE <i>back</i> – PRESS [P2]	<i>jolt &amp; beep</i>
REMOTE – PRESS [UP]	<i>jolt &amp; beep</i>
REMOTE – PRESS [UP]	<i>jolt x2 beep x1</i>

**DECREASE SPEED – 3 Speeds Available *low/med/high***

REMOTE <i>back</i> – PRESS [P2]	<i>jolt &amp; beep</i>
REMOTE – PRESS [DOWN]	<i>jolt &amp; beep</i>
REMOTE – PRESS [DOWN]	<i>jolt x2 beep x1</i>

**SOFT STOP OFF – motor must be on *low* speed setting**

REMOTE <i>back</i> – PRESS [P2]	<i>jolt &amp; beep</i>
REMOTE – PRESS [DOWN]	<i>jolt &amp; beep</i>
REMOTE – PRESS [DOWN]	<i>jolt &amp; beep</i>

**SOFT STOP ON – motor must be on *high* speed setting**

REMOTE <i>back</i> – PRESS [P2]	<i>jolt &amp; beep</i>
REMOTE – PRESS [UP]	<i>jolt &amp; beep</i>
REMOTE – PRESS [UP]	<i>jolt &amp; extended beep</i>



# SABER EU - BATTERY DC ROLLER BLINDS MOTOR SETUP INSTRUCTIONS



Speedy Blinds  
1300 88 44 24  
support@speedyblinds.com.au  
www.speedyblinds.com.au  
33 Latitude Blvd, Thomastown VIC 3074

**TBS (Saber) Roller Blinds**

Motor: SABER TBS25LEU/S – Battery DC Motor

SABER TBS28LEU/S – Battery DC Motor

*U stands for Micro USB Charging*

Remote: 15CH – TBS 1802/S

REMOTE – **Insert Battery**

MOTOR – **Fully Charge** (Micro USB)

**FACTORY RESET**

MOTOR – HOLD **[BUTTON]** *jolt x4 & beep x4*

**PAIRING**

*Select Channel*

MOTOR – HOLD **[BUTTON]** *jolt & beep*

REMOTE – HOLD **[STOP]** *jolt x2 beep x3*

**REVERSE ROLL DIRECTION** *if required*

REMOTE – HOLD **[UP] [DOWN]** *motor jolt x1*

**SET LIMITS**

**UP Limit FIRST**

REMOTE – HOLD **[UP]** *continuous travel*

REMOTE – PRESS **[UP]** *step mode*

REMOTE – HOLD **[UP] [STOP]** *jolt x2 beep x3*

**DOWN Limit SECOND**

REMOTE – HOLD **[DOWN]** *continuous travel*

REMOTE – PRESS **[DOWN]** *step mode*

REMOTE – HOLD **[DOWN] [STOP]** *jolt x2 beep x3*

**ADJUST UPPER LIMIT**

REMOTE – HOLD **[UP] [STOP]** *jolt & beep*

*Adjust Height*

REMOTE – HOLD **[UP] [STOP]** *jolt x2 beep x3*

**ADJUST LOWER LIMIT**

REMOTE – HOLD **[DOWN] [STOP]** *jolt & beep*

*Adjust Height*

REMOTE – HOLD **[DOWN] [STOP]** *jolt x2 beep x3*

**COPY CHANNEL USING MOTOR – ADD CHANNEL OR REMOTE**

*Select Channel*

MOTOR – HOLD **[BUTTON]** *jolt & beep*

NEW CHANNEL – HOLD **[STOP]** *jolt x2 beep x3*

**DELETE CHANNEL USING MOTOR – DELETE CHANNEL OR REMOTE**

*Select Channel*

MOTOR – HOLD **[BUTTON]** *jolt & beep*

CHANNEL TO DELETE – HOLD **[STOP]** *jolt x2 beep x3*

**HIDE / UNHIDE CHANNELS**

REMOTE – HOLD **[LEFT] [RIGHT]** *display 15*

*Select last channel to keep*

REMOTE – PRESS **[STOP]** *display oK*

**LOCK / UNLOCK LIMIT ON REMOTE**

REMOTE – HOLD **[STOP]** *display L or U*

REMOTE *back* – PRESS **[P2]** *display oK*

U – Limit Settings Unlocked

L – Limit Settings Locked

**ENABLE SLEEP MODE**

MOTOR – HOLD **[BUTTON]** *jolt x2 & beep x2*

**WAKE UP**

MOTOR – PRESS **[BUTTON]** *Roll to nearest limit*

**SWITCH BETWEEN TILT & ROLL MODE**

REMOTE – HOLD **[UP] [DOWN]** *motor jolt x1*

REMOTE – PRESS **[STOP]** *switch modes*

MODE: *TILT (hold Up or Down to Roll)* *jolt & beep*

MODE: *ROLL* *jolt x2 beep x3*

**ONE WAY (UNIDIRECTIONAL) / TWO WAY (BIDIRECTIONAL) MODE**

REMOTE – Remove Battery

REMOTE – HOLD **[P2]**

REMOTE – Put in Battery

1 – One Way (Unidirectional) Mode *(will not work)*

2 – Two Way (Bidirectional) Mode *(default)*

**TROUBLESHOOT**

**MOTOR** check got power

MOTOR not in sleep mode

MOTOR in roll mode

**REMOTE** check got battery

REMOTE unlocked

REMOTE unhide all channels

REMOTE in Two Way BIDIRECTIONAL Mode

All else fail, Factory Reset