

USER PREFERENCES

SET OR EDIT FAVOURITE POSITION

Move to desired position

REMOTE – HOLD [MY] *motor jolt x 1*

MOVE TO FAVOURITE POSITION

REMOTE – PRESS [MY]

If blind moves to Lower Limit first, then to Favourite Position, Motor is in Tilt Mode

DELETE FAVOURITE POSITION

Move to Favourite Position

REMOTE – HOLD [MY] *motor jolt x 1*

COPY CHANNEL USING REMOTE – ADD CHANNEL OR REMOTE

EXISTING CHANNEL *back* – HOLD [PROG] *motor jolt x 1*

NEW CHANNEL *back* – PRESS [PROG] *motor jolt x 1*

DELETE CHANNEL USING REMOTE – DELETE CHANNEL OR REMOTE

CHANNEL TO KEEP *back* – HOLD [PROG] *motor jolt x 1*

CHANNEL TO DELETE *back* – PRESS [PROG] *motor jolt x 1*

**SPEEDY
BLINDS**



somfy®

**SONESSE 40 RTS - WIRED AC
ROLLER BLINDS MOTOR
SETUP INSTRUCTIONS**

Speedy Blinds
1300 88 44 24
support@speedyblinds.com.au
www.speedyblinds.com.au
33 Latitude Blvd, Thomastown VIC 3074



Somfy (Sonesse RTS) Roller Blinds

Motor: Sonesse 40 RTS 3/30 6/20 – Wired AC Motor

Remote: Situo 1/2/5 RTS

REMOTE – Insert Battery

PAIRING

Select Channel

MOTOR – Connect Power

REMOTE – HOLD [UP] [DOWN] *motor jolt x 1*

REVERSE ROLL DIRECTION *if required*

REMOTE – HOLD [MY] *motor jolt x 1*

SET LIMITS

UP Limit FIRST

REMOTE – HOLD [UP] *continuous travel*

REMOTE – PRESS [UP] *step mode*

REMOTE – HOLD [MY] [DOWN] *travels down*

DOWN Limit SECOND

REMOTE – HOLD [DOWN] *continuous travel*

REMOTE – PRESS [DOWN] *step mode*

REMOTE – HOLD [MY] [UP] *travels to upper limit*

REMOTE – HOLD [MY] *motor jolt x 1*

REMOTE back – PRESS [PROG] *motor jolt x 1*

ADJUST UPPER LIMIT

Move to Upper Limit

REMOTE – HOLD [UP] [DOWN] *motor jolt x 1*

Adjust Height

REMOTE – HOLD [MY] *motor jolt x 1*

ADJUST LOWER LIMIT

Move to Lower Limit

REMOTE – HOLD [UP] [DOWN] *motor jolt x 1*

Adjust Height

REMOTE – HOLD [MY] *motor jolt x 1*

DELETE ALL REMOTES USING MOTOR

MOTOR – Power [OFF] *2 seconds*

MOTOR – Power [ON] *10 seconds*

MOTOR – Power [OFF] *2 seconds*

MOTOR – Power [ON] *motor jolt x 1*

REMOTE back – PRESS [PROG] *motor jolt x 1*

FACTORY RESET MOTOR USING MOTOR

MOTOR – Power [OFF] *2 seconds*

MOTOR – Power [ON] *10 seconds*

MOTOR – Power [OFF] *2 seconds*

MOTOR – Power [ON] *motor jolt x 1*

REMOTE back – HOLD [PROG] *motor jolt x 2*

REVERSE ROLL DIRECTION *after limits have been set*

!! MOVE BLIND AWAY FROM LIMITS !!

REMOTE – HOLD [UP] [DOWN] *motor jolt x 1*

REMOTE – HOLD [MY] *motor jolt x1*

SWITCH BETWEEN TILT & ROLL MODE

!! MOVE BLIND AWAY FROM LIMITS !!

REMOTE – HOLD [UP] [DOWN] *motor jolt x 1*

REMOTE – HOLD [MY] [DOWN] *motor jolt x1*

MODE: TILT

MODE: ROLL

TILT MODE blind moves to Lower Limit first, then to Favourite Position