

USER PREFERENCES

SET FAVOURITE POSITION

Move to Position

REMOTE <i>back</i> – PRESS [P2]	<i>jolt & beep</i>
REMOTE – PRESS [STOP]	<i>jolt & beep</i>
REMOTE – PRESS [STOP]	<i>jolt x2 beep x3</i>

MOVE TO FAVOURITE POSITION

REMOTE – HOLD [STOP]

DELETE FAVOURITE POSITION

REMOTE <i>back</i> – PRESS [P2]	<i>jolt & beep</i>
REMOTE – PRESS [STOP]	<i>jolt & beep</i>
REMOTE – PRESS [STOP]	<i>jolt & beep</i>

COPY CHANNEL USING REMOTE – ADD CHANNEL OR REMOTE

EXISTING CHANNEL <i>back</i> – PRESS [P2]	<i>jolt & beep</i>
EXISTING CHANNEL <i>back</i> – PRESS [P2]	<i>jolt & beep</i>
NEW CHANNEL <i>back</i> – PRESS [P2]	<i>jolt x2 beep x3</i>

DELETE CHANNEL USING REMOTE – DELETE CHANNEL OR REMOTE

CHANNEL TO KEEP <i>back</i> – PRESS [P2]	<i>jolt & beep</i>
CHANNEL TO KEEP <i>back</i> – PRESS [P2]	<i>jolt & beep</i>
CHANNEL TO DELETE <i>back</i> – PRESS [P2]	<i>jolt x2 beep x3</i>



**ROLLEASE
ACMEDA**

PRECISION IN MOTION

**E6 ARC - WIRED AC
ROLLER BLINDS MOTOR
SETUP INSTRUCTIONS**

Speedy Blinds
1300 88 44 24
support@speedyblinds.com.au
www.speedyblinds.com.au
33 Latitude Blvd, Thomastown VIC 3074



ACMEDA (Automate) Roller Blinds

Motor: E6 ARC – Wired AC Motor

Remote: Automate | 15CH ARC Remote

REMOTE – Insert Battery

MOTOR – Connect Power

FACTORY RESET MOTOR

MOTOR – HOLD [BUTTON] *jolt x4 & let go of button & beep x4*

PAIRING

Select Channel

MOTOR – PLUG IN – or – *jolt & beep*

MOTOR – HOLD [BUTTON] *jolt & beep*

REMOTE – HOLD [STOP] *jolt x2 & beep x3*

REVERSE ROLL DIRECTION if required

REMOTE – HOLD [UP] [DOWN] *motor jolt x 1*

SET LIMITS

UP Limit FIRST

REMOTE – HOLD [UP] *continuous travel*

REMOTE – PRESS [UP] *step mode*

REMOTE – HOLD [UP] [STOP] *jolt x2 beep x3*

DOWN Limit SECOND

REMOTE – HOLD [DOWN] *continuous travel*

REMOTE – PRESS [DOWN] *step mode*

REMOTE – HOLD [DOWN] [STOP] *jolt x2 beep x3*

ADJUST UPPER LIMIT

REMOTE – HOLD [UP] [STOP] *jolt & beep*

Adjust Height

REMOTE – HOLD [UP] [STOP] *jolt x2 beep x3*

ADJUST LOWER LIMIT

REMOTE – HOLD [DOWN] [STOP] *jolt & extended beep*

Adjust Height

REMOTE – HOLD [DOWN] [STOP] *jolt x2 beep x3*

COPY CHANNEL USING MOTOR – ADD CHANNEL OR REMOTE

Select Channel

MOTOR – HOLD [BUTTON] *jolt & beep*

NEW CHANNEL – HOLD [STOP] *jolt x2 beep x3*

DELETE CHANNEL USING MOTOR – DELETE CHANNEL OR REMOTE

Select Channel

MOTOR – HOLD [BUTTON] *jolt & beep*

CHANNEL TO DELETE – HOLD [STOP] *jolt x2 beep x3*

DELETE ALL REMOTES CONNECTED TO MOTOR USING REMOTE

REMOTE back – PRESS [P2] *jolt & beep*

REMOTE – PRESS [STOP] *jolt & beep*

REMOTE back – PRESS [P2] *jolt x2 beep x3*

DELETE ALL LIMITS ON MOTOR USING REMOTE

REMOTE back – PRESS [P2] *jolt & beep*

REMOTE – PRESS [DOWN] *jolt & beep*

REMOTE back – PRESS [P2] *jolt x2 beep x3*

HIDE / UNHIDE CHANNELS

REMOTE – HOLD [+] [-] *display 15*

Select last channel to keep

REMOTE – PRESS [STOP] *display oK*

LOCK / UNLOCK LIMIT SETTING ON REMOTE

REMOTE back – HOLD [TOP RIGHT] *display L or U*

U – Unlocked

L – Locked

ENABLE SLEEP MODE

MOTOR – HOLD [BUTTON] *jolt x2 & beep x2*

WAKE UP

MOTOR – PRESS [BUTTON] *roll to nearest limit*

SWITCH BETWEEN TILT & ROLL MODE

REMOTE – HOLD [UP] [DOWN] *motor jolt x1*

REMOTE – PRESS [STOP] *switch modes*

MODE: TILT (hold Up or Down to Roll) *jolt & beep*

MODE: ROLL *jolt x2 beep x3*

TWO WAY (BIDIRECTIONAL) / ONE WAY (UNIDIRECTIONAL) MODE

REMOTE – Remove Battery

REMOTE – HOLD [P2]

REMOTE – Put in Battery

1 – Two Way (Bidirectional) Mode (ARC Only)

2 – One Way (Unidirectional) Mode (EL Only)

TROUBLESHOOT

MOTOR check got power

MOTOR not in sleep mode

MOTOR in roll mode

REMOTE check got battery

REMOTE unlocked

REMOTE unhide all channels

REMOTE in Two Way BIDIRECTIONAL Mode

All else fail, Factory Reset