

USER PREFERENCES

SET OR EDIT FAVOURITE POSITION

Move to Position

REMOTE – HOLD [MY] *jolt & LED green x5*

MOVE TO FAVOURITE POSITION

REMOTE – PRESS [MY]

If blind moves to Lower Limit first, then to Favourite Position, Motor is in Tilt Mode

DELETE FAVOURITE POSITION

Move to Favourite Position

REMOTE – HOLD [MY] *motor jolt x 1*

COPY CHANNEL USING REMOTE – ADD CHANNEL OR REMOTE

EXISTING CHANNEL *back* – HOLD [PROG] *jolt & LED green x5*
LED orange blinks

NEW CHANNEL *back* – PRESS [PROG] *jolt & LED green x5*

DELETE CHANNEL USING REMOTE – DELETE CHANNEL OR REMOTE

CHANNEL TO KEEP *back* – HOLD [PROG] *jolt & LED green x5*
LED orange blinks

CHANNEL TO DELETE *back* – PRESS [PROG] *jolt & LED green x5*

**SPEEDY
BLINDS**



somfy®

**SONESSE 30 RTS - BATTERY DC
ROLLER BLINDS MOTOR
SETUP INSTRUCTIONS**



Somfy (Sonesse RTS) Roller Blinds

Motor: Sonesse 30 RTS Wirefree Li-ion – Battery DC Motor

Remote: Situo 1/2/5 RTS

LED

| | |
|----------------------------------|---|
| Red blinks 5 times | <i>low battery</i> |
| Red Solid | <i>charging</i> |
| Green blinks twice every 10 secs | <i>charging near completion</i> |
| Solid Green | <i>charging complete</i> |
| Green blinks once | <i>when signal received from remote</i> |
| Orange Solid | <i>pairing mode</i> |
| Orange blinks continuously | <i>setting mode</i> |
| Red Solid | <i>blind stuck</i> |
| Red Blinks | <i>overheat protection mode</i> |

REMOTE – Insert Battery

MOTOR – Fully Charge

FACTORY RESET MOTOR

MOTOR – HOLD [BUTTON] *jolt x3 & LED green x5*

WAKE UP

MOTOR – PRESS [BUTTON] *jolt x3 & LED orange*

PAIRING *within 10secs*

Select Channel

REMOTE – HOLD [UP] [DOWN] *motor jolt x 1*

REVERSE ROLL DIRECTION *if required*

REMOTE – HOLD [MY] *jolt & LED green x5*

SET LIMITS

UP Limit FIRST

REMOTE – HOLD [UP] *continuous travel*

REMOTE – PRESS [UP] *step mode*

REMOTE – HOLD [MY] [DOWN] *travels down & LED green x5*

DOWN Limit SECOND

REMOTE – HOLD [DOWN] *continuous travel*

REMOTE – PRESS [DOWN] *step mode*

REMOTE – HOLD [MY] [UP] *travels to upper limit & LED green x5*

REMOTE – HOLD [MY] *motor jolt x 1*

REMOTE *back* – PRESS [PROG] *jolt & LED green x5*

ADJUST UPPER LIMIT

REMOTE – Select Channel

REMOTE – Move to UPPER Limit

REMOTE – HOLD [UP] [DOWN] *jolt & LED orange blinks*

Adjust Height

REMOTE – HOLD [MY] *jolt & LED green x5*

ADJUST LOWER LIMIT

Select Channel

REMOTE – Move to LOWER Limit

REMOTE – HOLD [UP] [DOWN] *jolt & LED orange blinks*

Adjust Height

REMOTE – HOLD [MY] *jolt & LED green x5*

COPY CHANNEL USING MOTOR – ADD CHANNEL OR REMOTE

MOTOR – HOLD [BUTTON] *jolt & LED green x5*

LED orange blinks

NEW CHANNEL *back* – PRESS [PROG] *jolt & LED green x5*

DELETE CHANNEL USING MOTOR – DELETE CHANNEL OR REMOTE

MOTOR – HOLD [BUTTON] *jolt & LED green x5*

LED orange blinks

CHANNEL TO DELETE *back* – PRESS [PROG] *jolt & LED green x5*

DELETE ALL REMOTES FROM MOTOR

MOTOR – HOLD [BUTTON] *jolt x2 & LED green x5*

INCREASE SPEED - 10 Speeds Available

!! MOVE BLIND AWAY FROM LIMITS !!

REMOTE – HOLD [UP] [MY] [DOWN] *jolt & LED green x5*

Blind will move Up and Down continuously

REMOTE – HOLD [UP] *jolt & LED green x5*

Maximum Speed Reached

step up x3 & step down x3

LED red x3

REMOTE – HOLD [MY] *jolt & LED green x5*

DECREASE SPEED - 10 Speeds Available

!! MOVE BLIND AWAY FROM LIMITS !!

REMOTE – HOLD [UP] [MY] [DOWN] *jolt & LED green x5*

Blind will move Up and Down continuously

REMOTE – HOLD [DOWN] *jolt & LED green x5*

Minimum Speed Reached

step up x3 & step down x3

LED red x3

REMOTE – HOLD [MY] *jolt & LED green x5*

ENABLE MOTOR RECEIVER

MOTOR – PRESS [BUTTON] *jolt & LED green x5*

SWITCH BETWEEN TILT & ROLL MODE

!! MOVE BLIND AWAY FROM LIMITS !!

REMOTE – HOLD [UP] [DOWN] *jolt & LED green x5*

REMOTE – HOLD [MY] [DOWN] *motor jolt x1*

MODE: TILT *LED green x2*

MODE: ROLL *LED green x3*

TILT MODE blind moves to Lower Limit first, then to Favourite Position